



# Illustrated Parts List

## Model Series

# 118400

TYPE NUMBERS  
0036 Through 0159.

### TABLE OF CONTENTS


Air Cleaner .....	7
Alternator .....	9
Blower Housing .....	10
Camshaft .....	5
Carburetor .....	8
Controls .....	9
Control Panel .....	9
Crankcase Cover .....	5
Crankshaft .....	5
Cylinder .....	2
Cylinder Head .....	4
Electric Starter .....	13
Exhaust System .....	14
Flywheel .....	6
Fuel Supply .....	11
Gasket Set - Engine .....	3
Gasket Set - Valve .....	4
Governor Spring .....	9
Ignition .....	6
Kit - Carburetor Overhaul .....	8
Oil Sensor Group .....	15
Operator's Manual .....	2
Piston, Rings, Connecting Rod .....	2
Rewind Starter .....	12
Valves .....	4
Warning Label .....	2

PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL

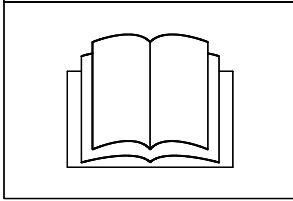

1330 REPAIR MANUAL

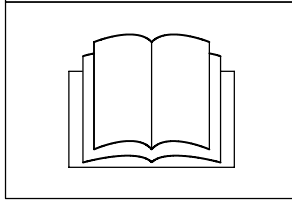


1319 WARNING LABEL

<b>WARNING</b>	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, <b>DO NOT</b> run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.

*REQUIRED* when replacing parts with warning labels affixed.

728

725

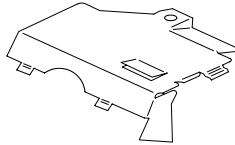

505

227



505

278


691

616

614

219


221

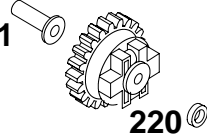

220

25

26

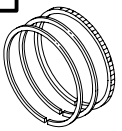


28



27

307

306

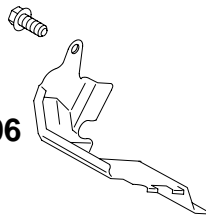

1


220

225

17


718

3

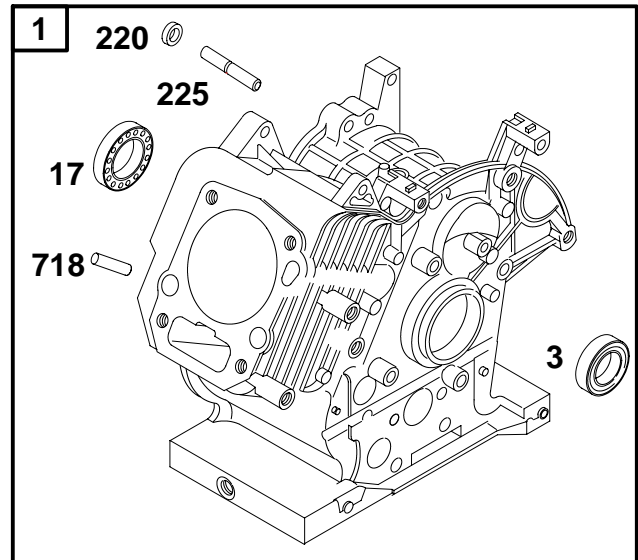


29


32




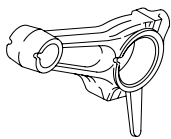






15

  
631

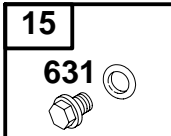


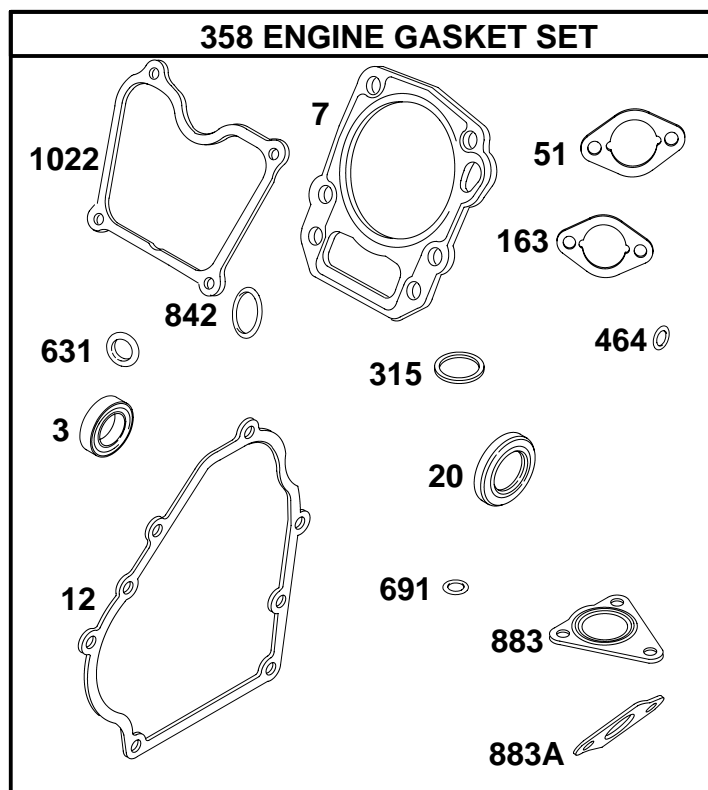


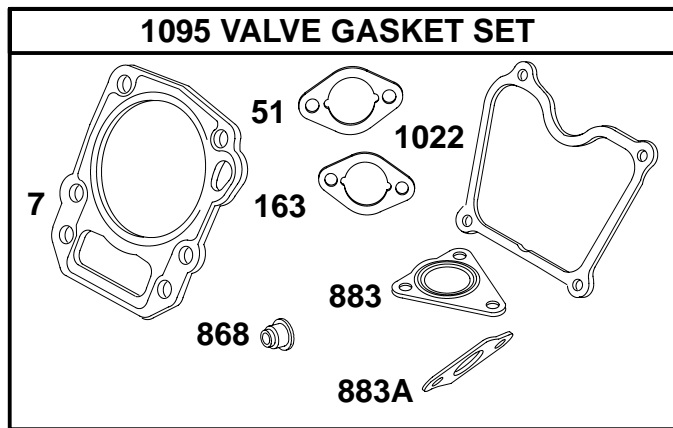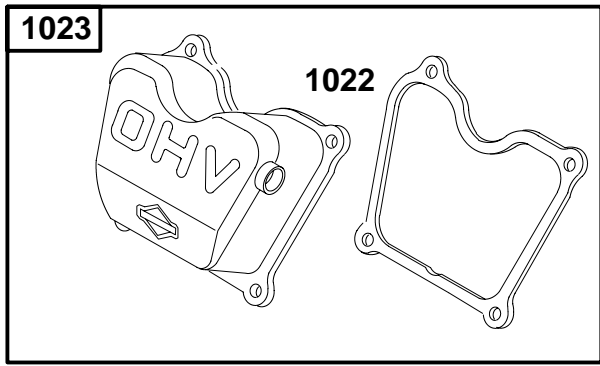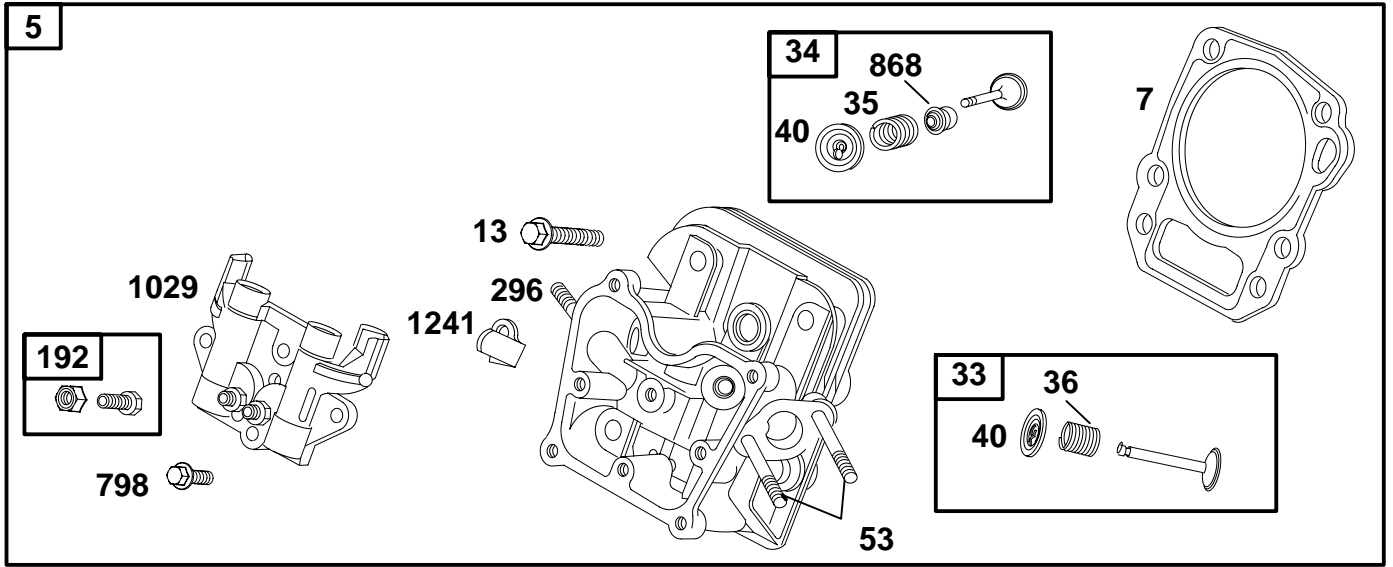


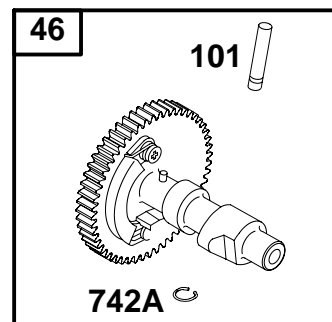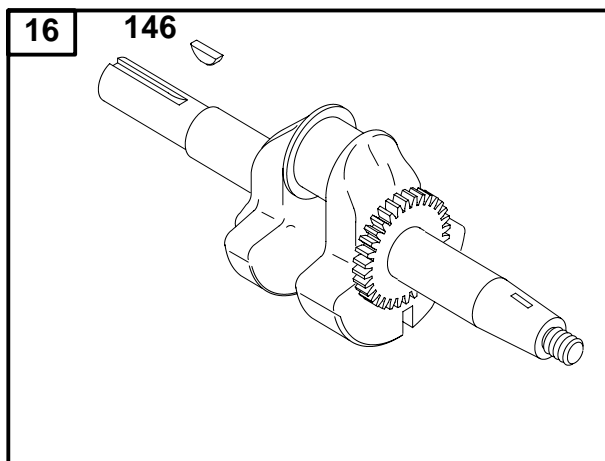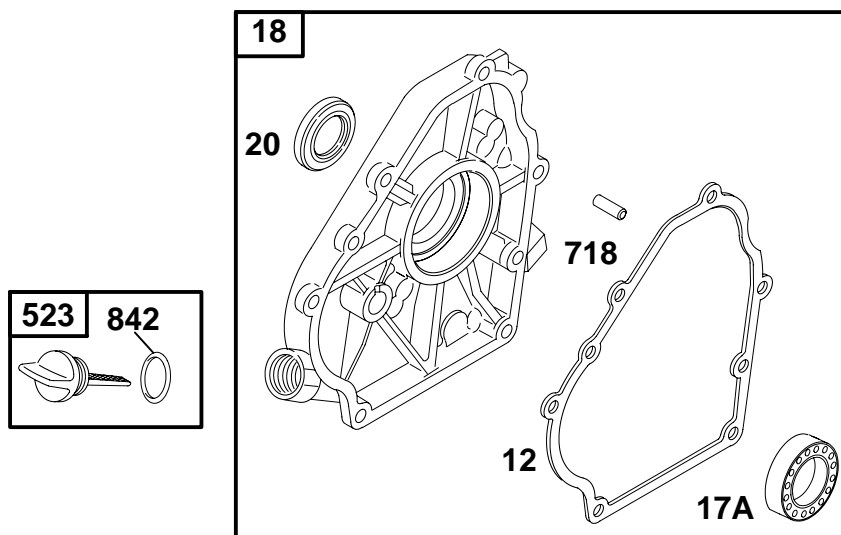


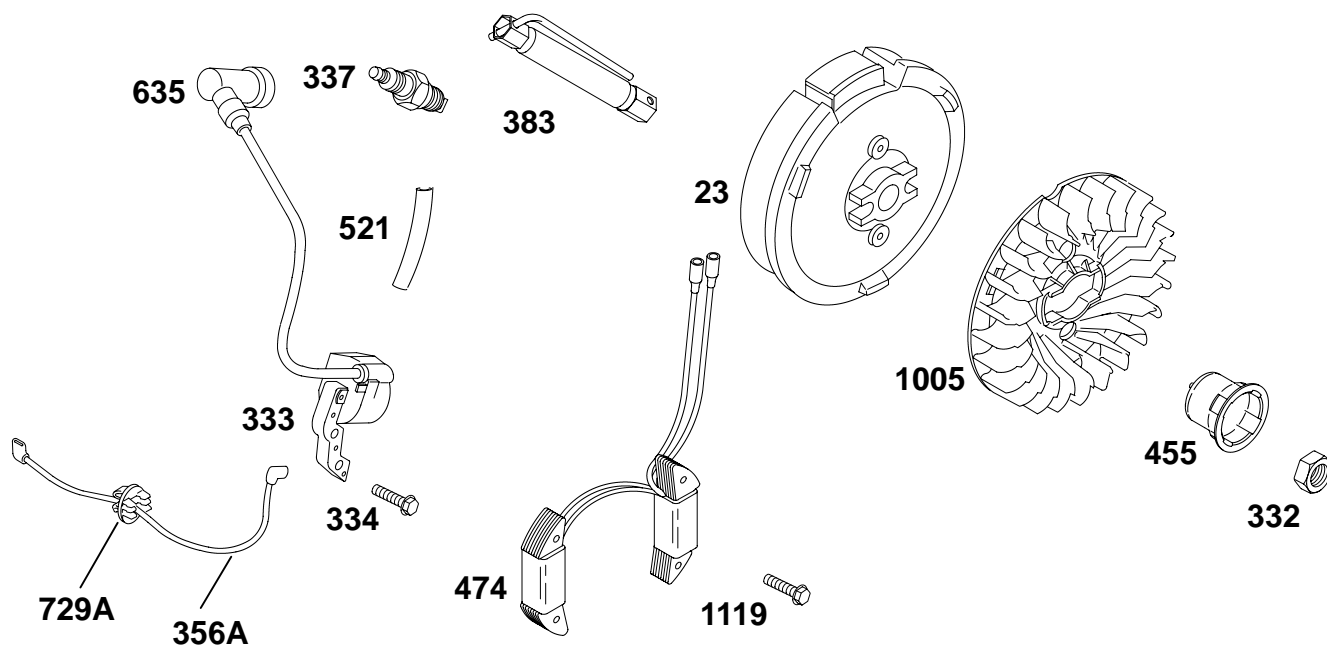




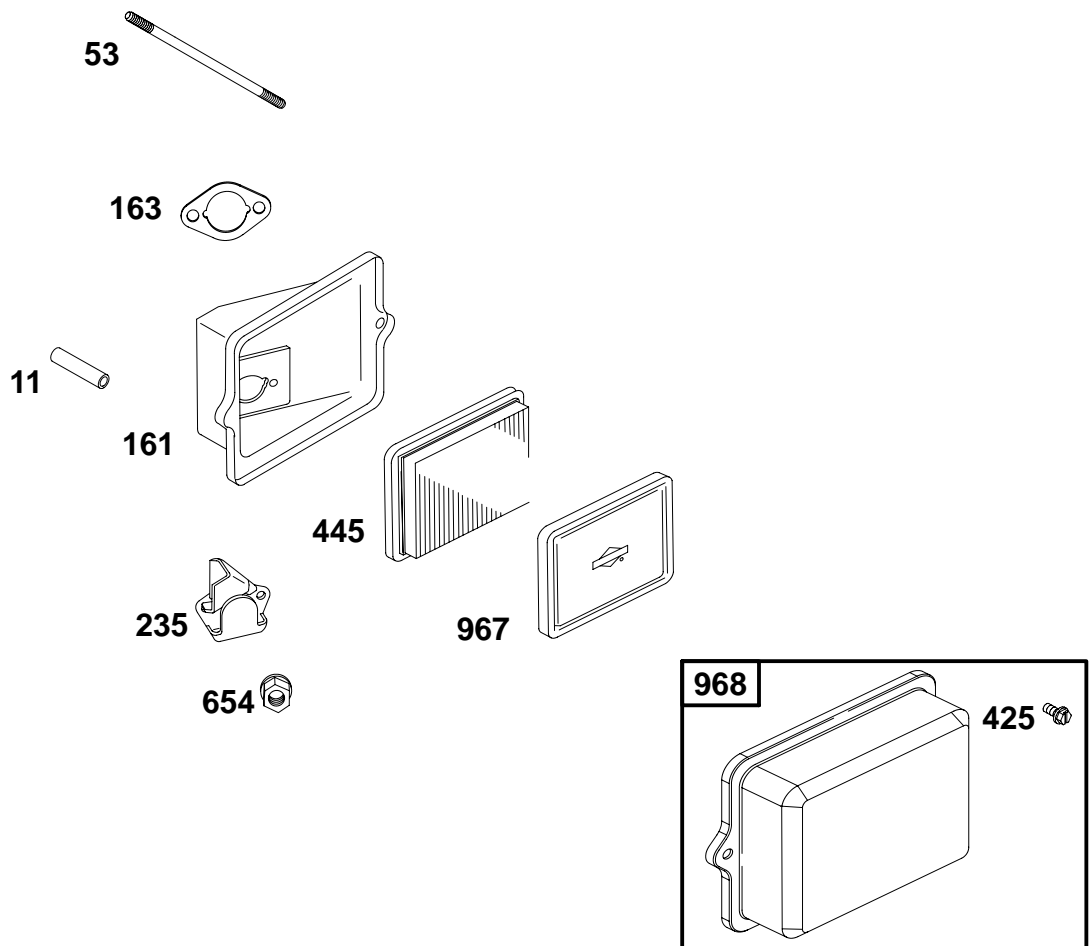


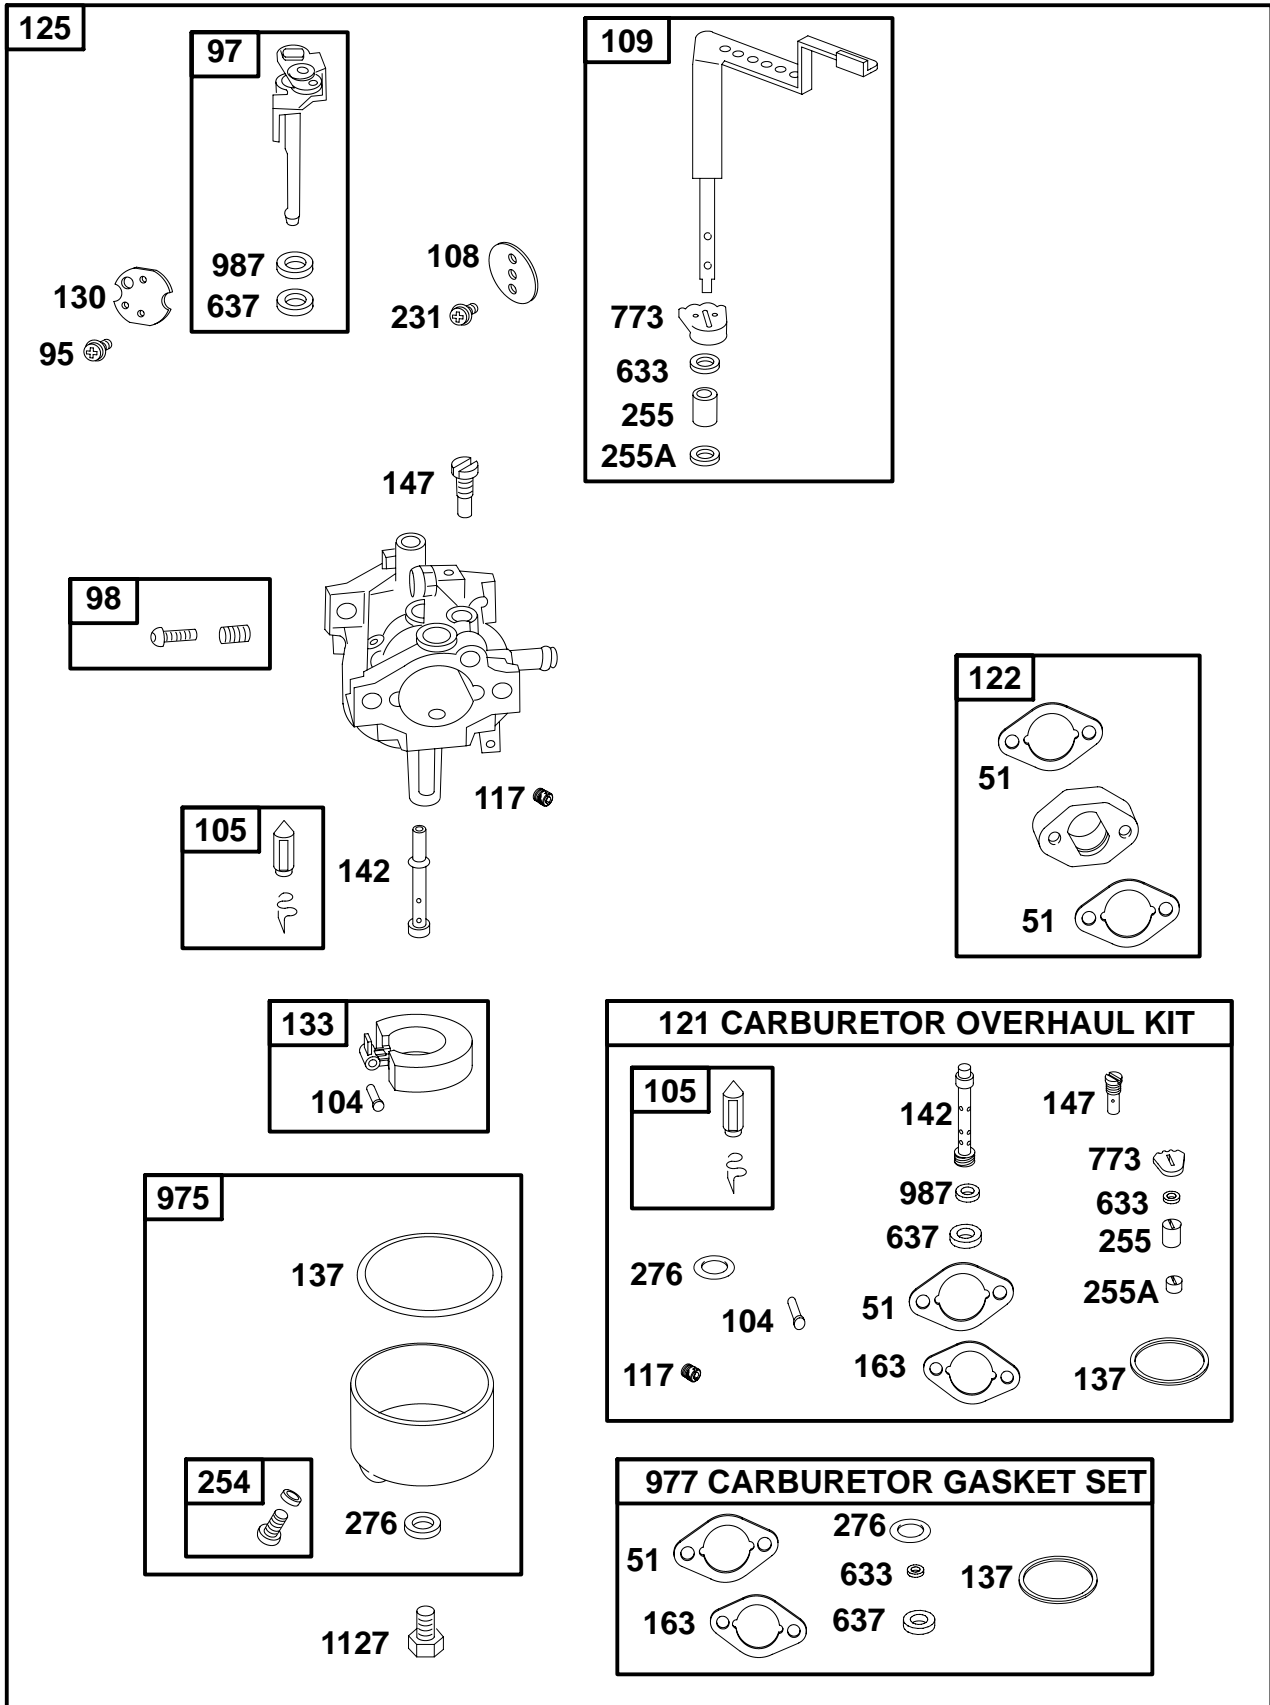



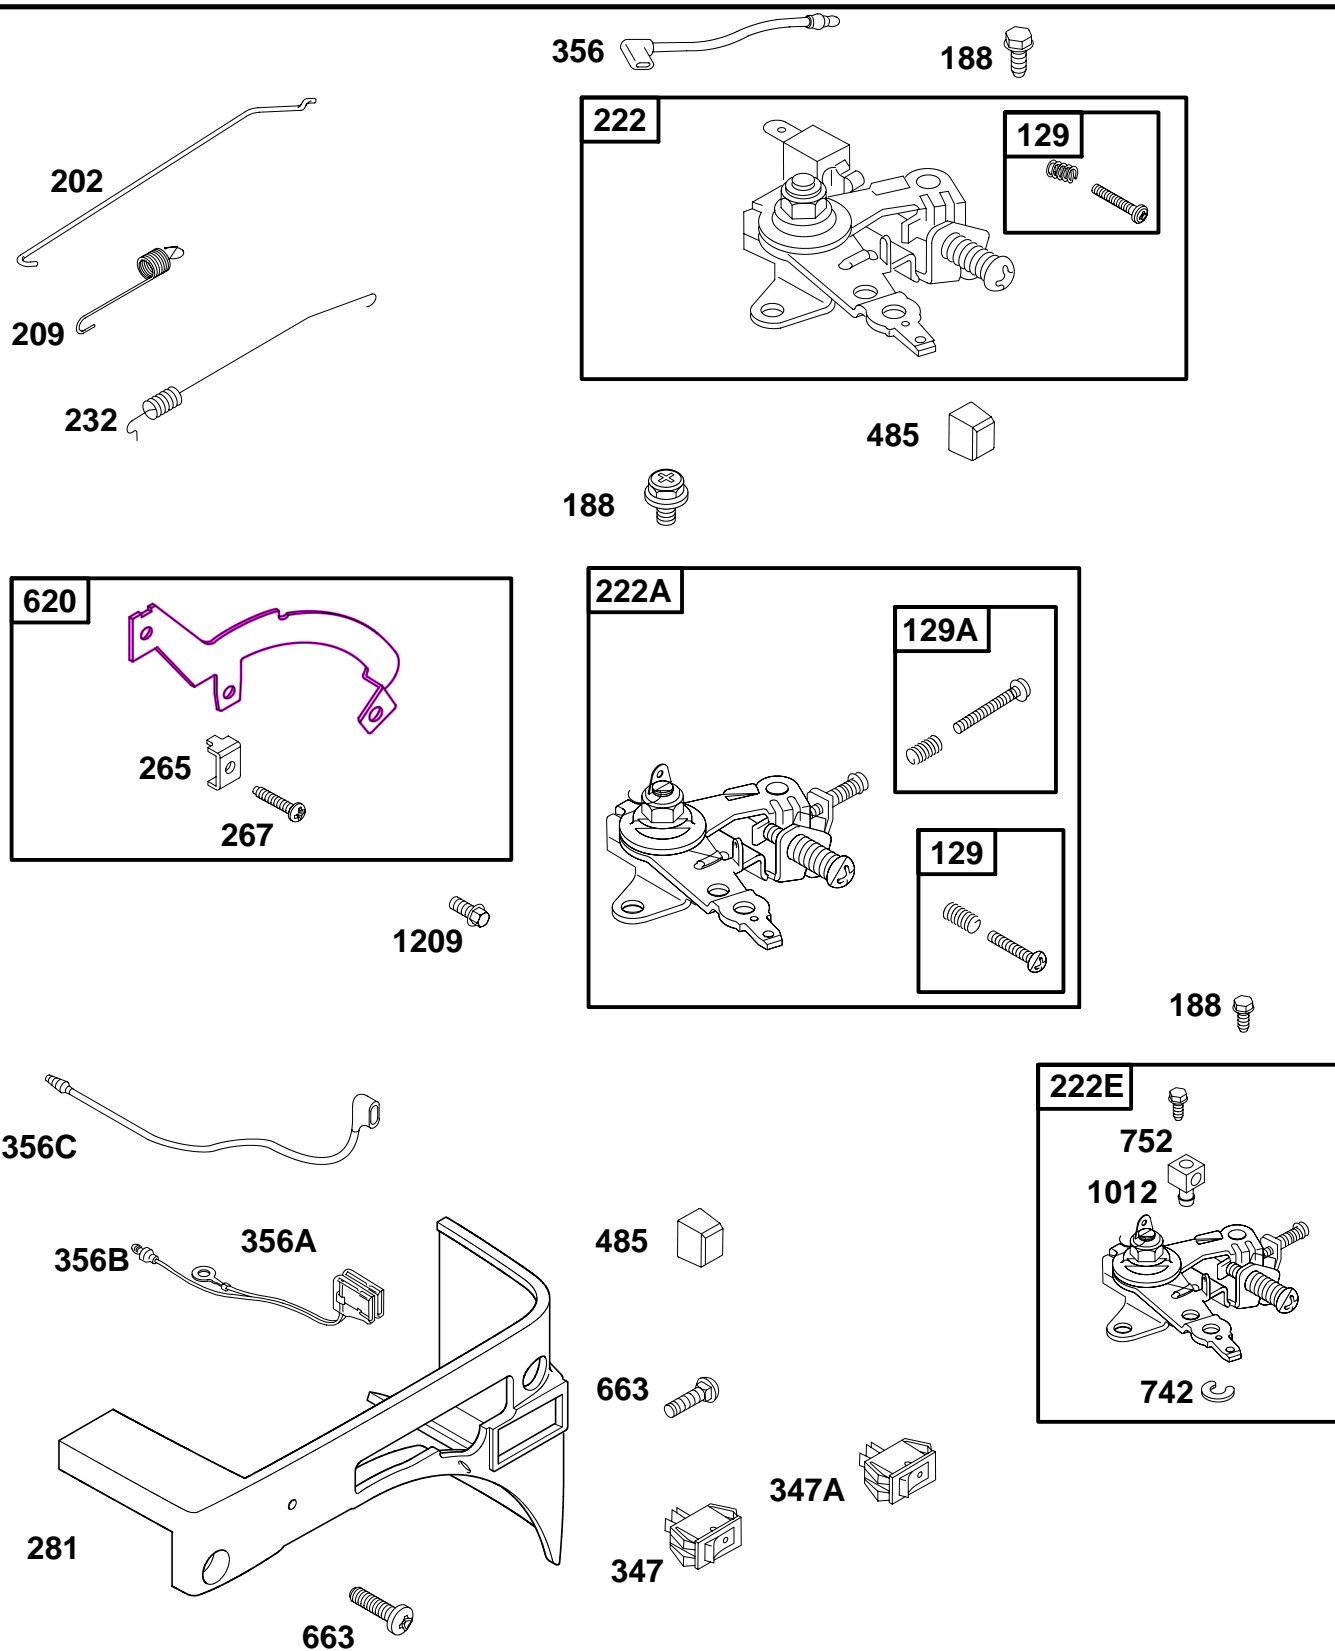





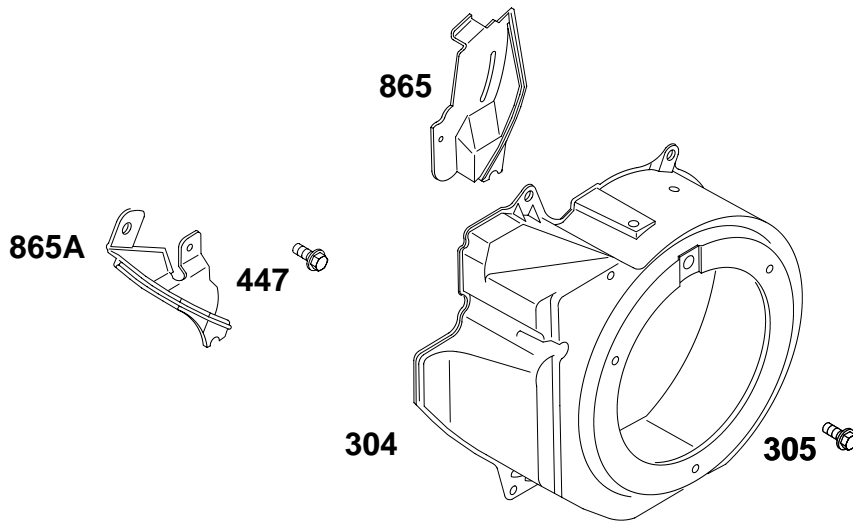



**1036 EMISSIONS LABEL**

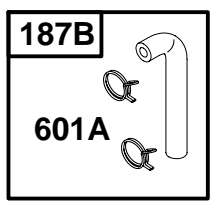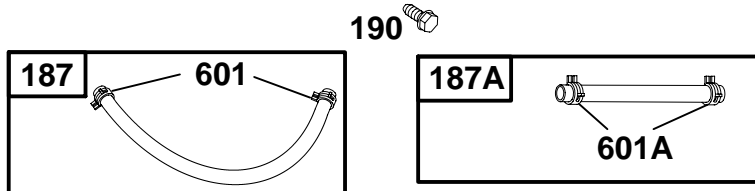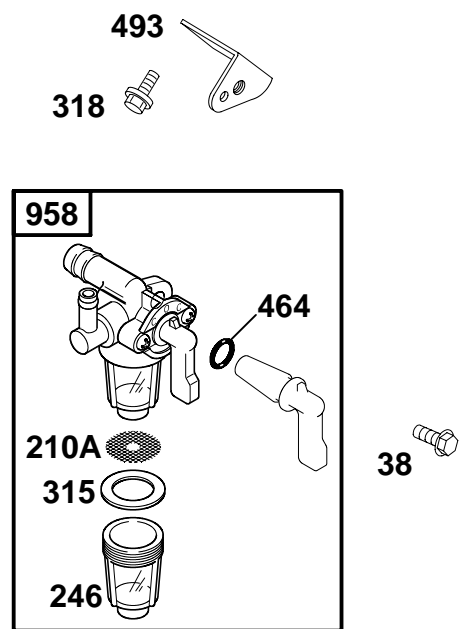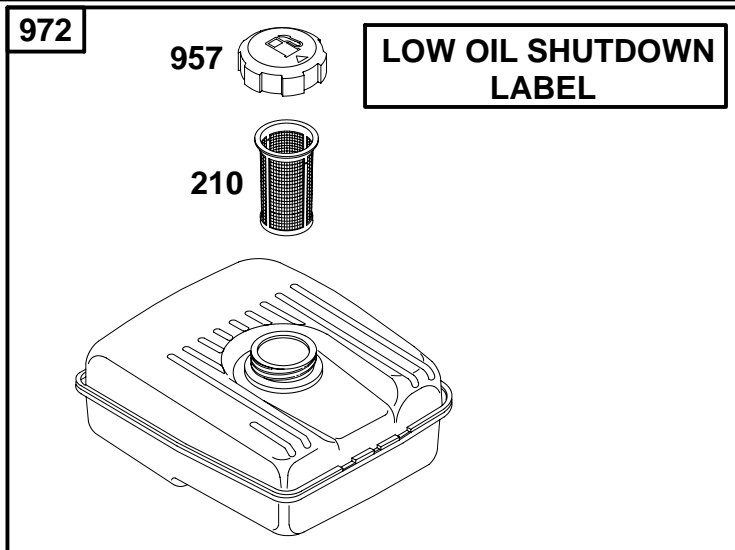

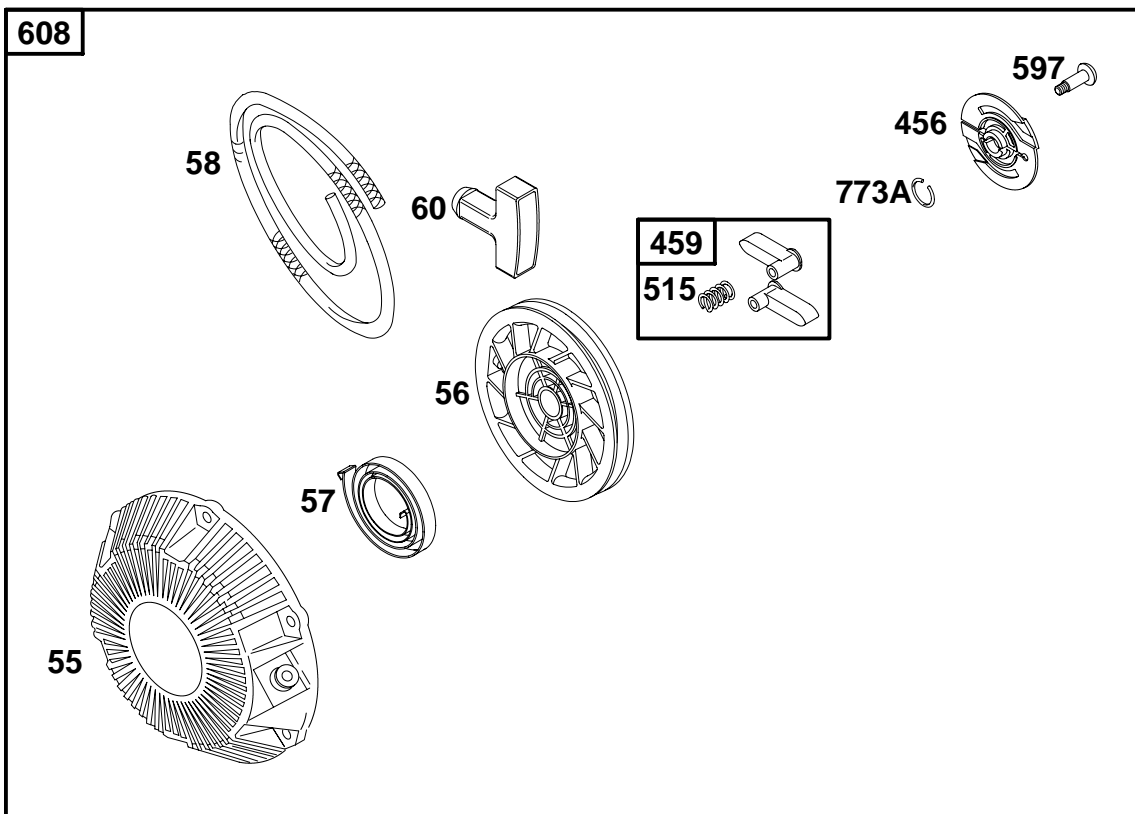

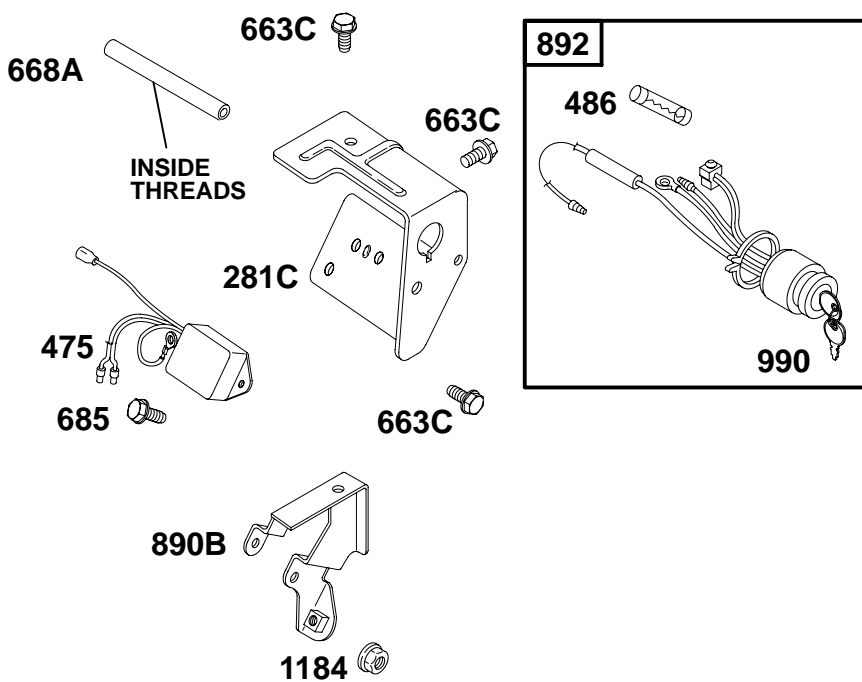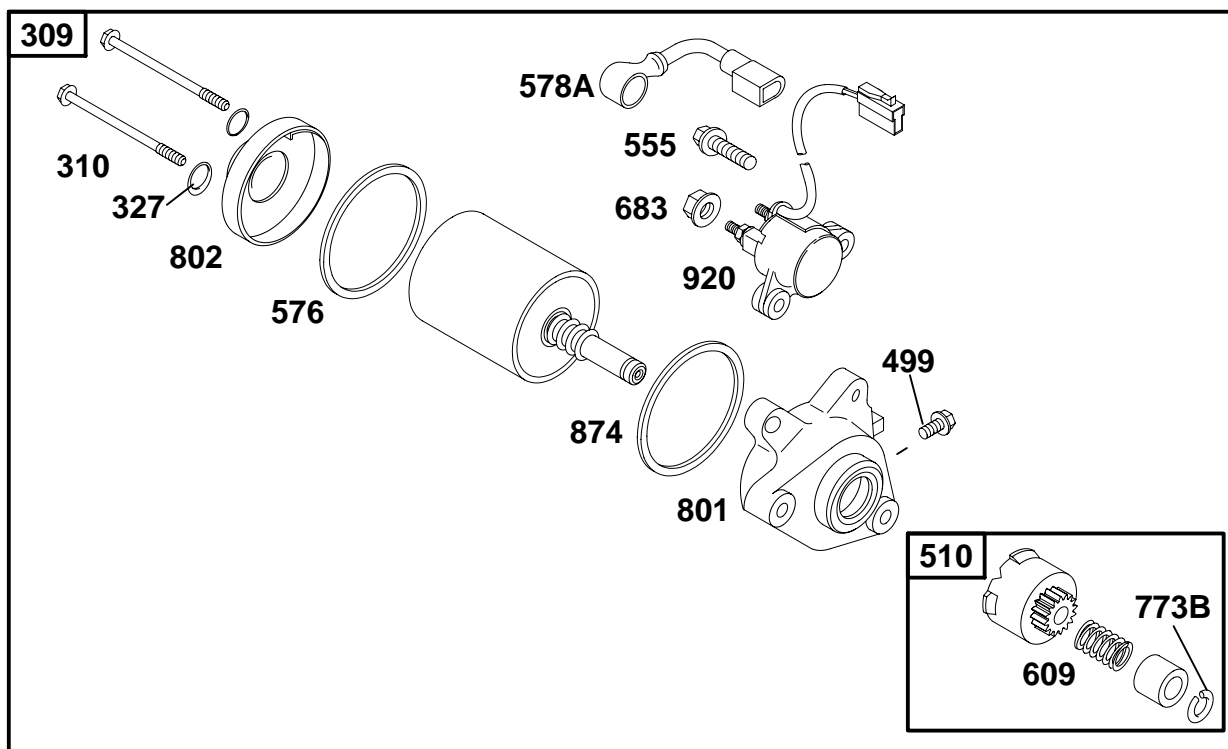

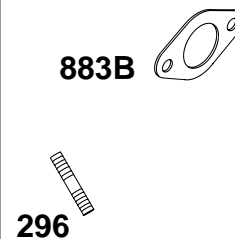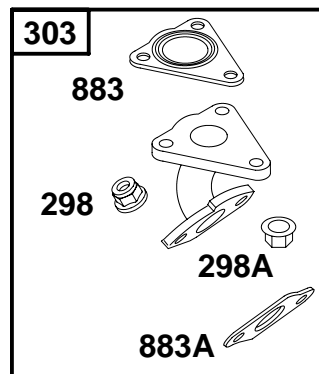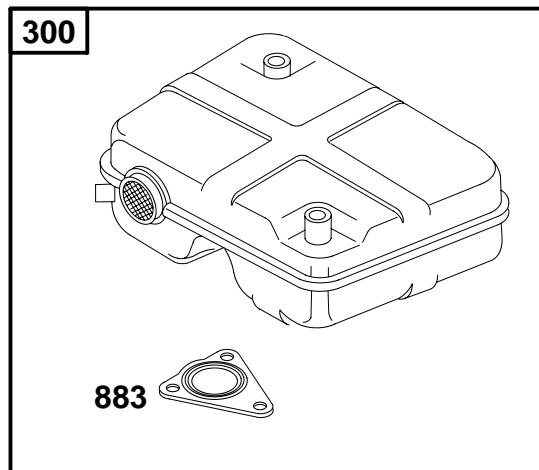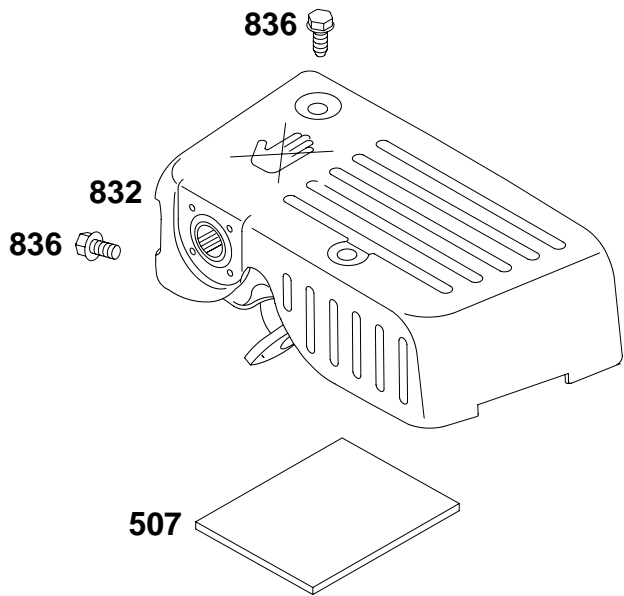

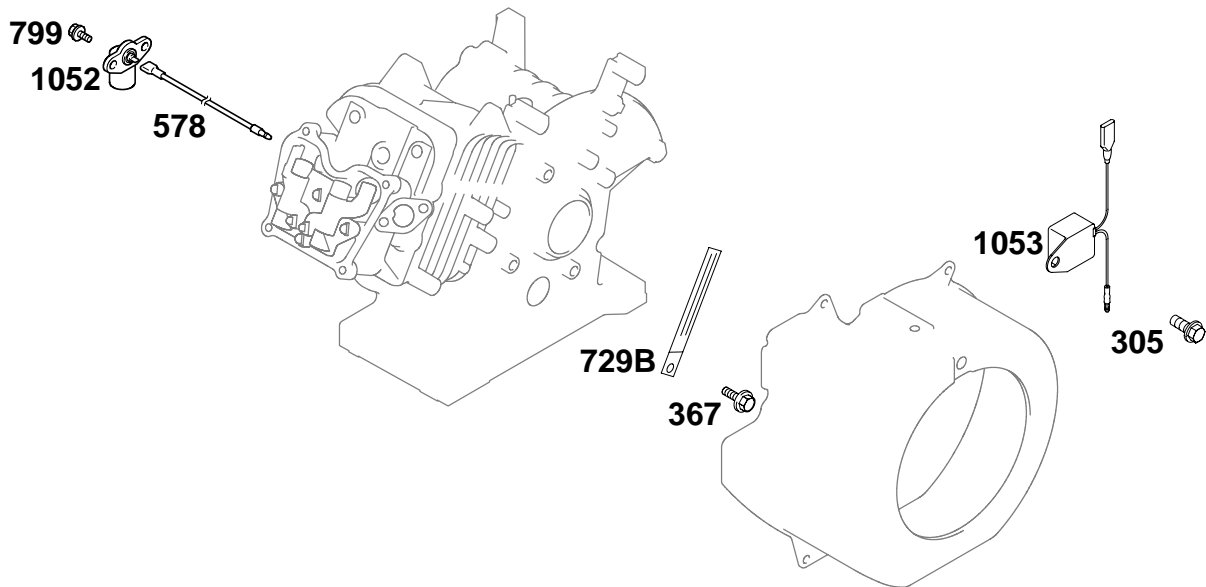

# 118400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	715810	Cylinder Assembly	20	★712070	Seal-Oil (PTO Side) (Used After Code Date 06063000).	55	711227	Housing-Rewind Starter
3	★712084	Seal-Oil (Used After Code Date 06063000). (Magneto Side)				56	711231	Pulley-Starter
		----- Note -----				57	711229	Spring-Rewind Starter
		★711139 Seal-Oil (Magneto Side) (Used Before Code Date 06070100).			----- Note -----	58	711221	Rope-Starter (Cut To Required Length)
5	715812	Head-Cylinder	22	710032	Screw (Crankcase Cover/Sump)	60	490652	Grip-Starter Rope
7	★Δ711129	Gasket-Cylinder Head				65	711222	Screw (Rewind Starter)
11	710115	Tube-Breather (Cut To Required Length)	23	712054	Flywheel	95	711311	Screw (Throttle Valve)
12	★711174	Gasket-Crankcase			----- Note -----	97	716155	Shaft-Throttle
13	710020	Screw (Cylinder Head)			711440 Flywheel Used on Type No(s). 0115.	98	715872	Kit-Idle Speed
15	715811	Plug-Oil Drain	24	710037	Key-Flywheel	101	711193	Pin-Shaft
16	711190	Crankshaft (SAE 3/4 Inch Keyway) Used on Type No(s). 0036, 0115, 0130.	25	715850	Piston Assembly (Standard)	104	●710195	Pin-Float Hinge
		----- Note -----			716139 Piston Assembly (.020" Undersize)	105	716099	Valve-Float Needle
		711331 Crankshaft (SAE Taper) Used on Type No(s). 0061, 0116, 0118, 0123, 0132, 0155.	26	715016	Ring Set (Standard)	108	711313	Valve-Choke
		711332 Crankshaft (SAE 5/8 Inch Thread) Used on Type No(s). 0125, 0127.			----- Note -----	109	715873	Shaft-Choke
		711333 Crankshaft (SAE 3/4" Threaded) Used on Type No(s). 0124.			715018 Ring Set (.020" Oversize)	117	●711323	Jet-Main (Standard)
		715903 Crankshaft (SAE) Used on Type No(s). 0060.	27	711172	Lock-Piston Pin	121	716024	Kit-Carburetor Overhaul
		715906 Crankshaft (JIS Keyway) Used on Type No(s). 0120.	28	715853	Pin-Piston	122	715034	Spacer-Carburetor
17	711140	Bearing-Ball	29	715847	Rod-Connecting (Standard)	125	716154	Carburetor
17A	711175	Bearing-Ball	32	710041	Screw (Connecting Rod)	129	715854	Screw/Spring- Governor Speed Used on Type No(s). 0036, 0060, 0115, 0124, 0125.
18	715842	Cover-Crankcase	33	715846	Valve-Exhaust			----- Note -----
		----- Note -----	34	715845	Valve-Intake			715941 Screw/Spring- Governor Speed Used on Type No(s). 0061, 0116, 0118, 0123.
		711254 Cover- Crankcase Used on Type No(s). 0120.	35	711087	Spring-Valve (Intake)	129A	716094	Screw/Spring- Governor Speed
			36	711087	Spring-Valve (Exhaust)	130	711312	Valve-Throttle
			38	710057	Screw (Shut Off Valve)	133	715079	Float-Carburetor
			40	711086	Retainer-Valve	137	●711318	Gasket-Float Bowl
			45	711173	Tappet-Valve	142	●711322	Nozzle-Carburetor (Standard)
			46	716152	Camshaft (Spur Gear With Compression Release)	146	710037	Key-Timing
			51★Δ●710060	Gasket-Intake	147	●711315	Jet-Pilot	
			53	710148	Stud (Carburetor)	161	711198	Base-Air Cleaner (Metal)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
163★▲◆	710639	Gasket-Intake	221	710027	Cup-Governor	281C	710479	Panel-Control
187	716126	Line-Fuel (8mm Inside Diameter)(Cut To Required Length)	222	715855	Bracket-Control Used on Type No(s). 0036, 0060, 0115, 0124, 0125.	296	710099	Stud (Muffler)
187A	716121	Line-Fuel (4mm Inside Diameter)(Cut to Required Length)	----- Note -----			298	710090	Locknut-Muffler/Elbow
187B	716120	Line-Fuel (4mm Inside Diameter)(Molded)(Cut to Required Length)	222A	715905	Bracket-Control Used on Type No(s). 0061, 0116, 0118, 0123, 0132, 0137, 0155.	298A	710068	Locknut-Muffler/Elbow
188	711209	Screw (Control Bracket)	222E	716243	Bracket-Control Used on Type No(s). 0145, 0159.	300	711239	Muffler
190	711216	Screw (Fuel Tank)	225	710028	Shaft-Governor Gear	303	715861	Elbow-Exhaust
192	715841	Adjuster-Rocker Arm	227	711205	Lever-Governor Control	304	711210	Housing-Blower
202	711206	Link-Mechanical Governor	231	711314	Screw (Choke Valve)	305	710023	Screw (Blower Housing)
209	711250	Spring-Governor Used on Type No(s). 0036, 0060, 0115.	232	711207	Spring-Governor Link	306	711211	Shield-Cylinder
		----- Note -----	233	710522	Shield-Fuel Spray	307	710023	Screw (Cylinder Shield)
		711957 Spring- Governor Used on Type No(s). 0061, 0116, 0118, 0123, 0132, 0137, 0155.	235	710522	Shield-Fuel Spray	309	715412	Motor-Starter
		711436 Spring- Governor Used on Type No(s). 0124, 0125.	240	298090s	Filter-Fuel Used on Type No(s). 0061.	310	710838	Bolt (Starter Motor)
		711437 Spring- Governor Used on Type No(s). 0127.	246	710070	Bowl-Fuel Filter	315	★710072	Seal-O Ring (Filter Bowl)
		711438 Spring- Governor Used on Type No(s). 0120, 0128, 0130, 0131, 0140, 0143, 0144, 0145, 0150, 0151, 0152, 0159.	254	716203	Drain-Carburetor Bowl	318	710074	Screw (Mounting Bracket)
210	710065	Strainer-Fuel	255	◆710177	Bushing-Choke Shaft	327	710841	Washer (Starter Sub Assembly)
210A	710071	Strainer-Fuel	255A	◆710179	Bushing-Choke Shaft	332	710048	Nut (Flywheel)
219	715679	Gear-Governor	265	711682	Clamp-Casing	333	711197	Armature-Magneto
220	710545	Washer (Governor Gear)	276	◆711319	Washer-Sealing	334	711142	Screw (Magneto Armature)
			278	710058	Washer (Governor Control Lever)	337	711252	Plug-Spark
			281	711248	Panel-Control Used on Type No(s). 0036, 0060, 0115, 0118, 0124, 0125.	347	691995	Switch-Rocker
					----- Note -----	347A	711439	Switch-Rocker Used on Type No(s). 0118.
					711433 Panel-Control Used on Type No(s). 0061, 0116, 0120, 0123, 0127, 0130, 0132, 0155.	356	711203	Wire-Stop
						356A	710324	Wire-Stop
						356B	710087	Wire-Stop Used on Type No(s). 0061, 0116, 0120, 0123, 0127, 0130, 0155.
						356C	710120	Wire-Stop Used on Type No(s). 0061, 0116, 0120, 0123, 0127, 0130, 0155.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

▲ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 118400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
358	716246	Gasket Set-Engine (Used After Code Date 06063000). ----- <b>Note</b> ----- 715875 Gasket Set-Engine (Used Before Code Date 06070100).	601	711998	Clamp-Hose	799	710057	Screw (Oil Sensor)
367	711427	Screw (Wire Clip)	601A	711549	Clamp-Hose	801	710836	Cap-Drive (Includes Brush Set)
383	19374s	Wrench-Spark Plug	608	715859	Starter-Rewind	802	710832	Cap-End
413	710081	Nut (Starter Motor)	609	710828	Spring-Starter Drive	832	711241	Guard-Muffler
425	694515	Screw (Air Cleaner Cover)	614	710056	Pin-Cotter	836	710074	Screw (Muffler Guard)
445	491588s	Filter-Air Cleaner Cartridge	616	711204	Crank-Governor	842	★710029	Seal-O Ring (Dipstick Tube)
447	710023	Screw (Air Guide Cover)	620	716026	Panel-Speed Control Used on Type No(s). 0131, 0144, 0150, 0151, 0152, 0159.	865	711212	Cover-Air Guide (Opposite Cylinder Head Side)
455	711237	Cup-Flywheel	631	★711188	Washer (Oil Drain Plug)	865A	711213	Cover-Air Guide (Cylinder Head Side)
456	711233	Plate-Pawl Friction	633	◆	Seal-Choke/Throttle Shaft (Sold In Kit Only)	868	Δ712063	Seal-Valve
459	715860	Pawl-Ratchet	635	710634	Boot-Spark Plug ----- <b>Note</b> ----- 712029 Boot-Spark Plug Used on Type No(s). 0145, 0153, 0154, 0155, 0159.	874	710834	Seal-O Ring (Drive Cap)
464	★710069	Seal-O Ring (Fuel Shut-off Valve)	637	◆	Washer (Throttle Shaft)(Sold In Kit Only)	883	★Δ711245	Gasket-Exhaust
474	715255	Alternator Used on Type No(s). 0115, 0128, 0143, 0159.	654	710068	Nut (Carburetor)	883A	★Δ711244	Gasket-Exhaust
475	715200	Rectifier	663	711249	Screw (Control Panel)	883B	710082	Gasket-Exhaust Used on Type No(s). 0061, 0116, 0155.
485	692295	Knob-Control	663C	710074	Screw (Control Panel)	890B	710441	Bracket-Support
486	712050	Fuse 5 Amp)	668A	710443	Spacer	892	715199	Switch-Key
493	711219	Bracket-Mounting	683	710849	Nut (Starter Solenoid)	914	710057	Screw (Rocker Cover)
499	710853	Screw (Starter Sub Assembly)	685	710089	Screw (Rectifier)	920	710843	Solenoid-Starter
505	711208	Nut (Governor Control Lever)	691	★710055	Seal-Governor Shaft	957	711215	Cap-Fuel Tank (Plastic)
507	711243	Insulator	718	710005	Pin-Locating	958	715901	Valve-Fuel Shut Off (Plastic)
510	715634	Drive-Starter	725	711251	Shield-Heat	967	491435s	Filter-Pre Cleaner
515	691528	Spring-Pawl	728	710023	Screw (Heat Shield)	968	692321	Cover-Air Cleaner
521	711171	Shield-Cable	729A	710046	Clip-Wire	972	715856	Tank-Fuel (Plastic)
523	715588	Dipstick	729B	710407	Clip-Wire	975	716202	Bowl-Float
527	710100	Clamp-Tube	741	711191	Gear-Timing (Spur Gear)	977	715876	Gasket Set-Carburetor
555	710845	Screw (Starter Solenoid)	742	710477	Retainer-E Ring	987	◆711324	Seal-Throttle Shaft
576	710834	Seal-O-Ring (Starter Sub Assembly)	742A	710548	Ring-Retaining	990	712052	Key Set
578	711247	Wire Assembly (Oil Sensor)	752	710478	Screw (Link Retainer)	1005	711170	Fan-Flywheel
578A	710847	Wire Assembly (Starter Solenoid)	773	◆710175	Retainer	1009	710348	Screw (Starter Motor)
597	711235	Screw (Pawl Friction Plate)	773A	711225	Retainer	1012	710855	Retainer-Link
			773B	710830	Retainer	1022	★Δ711112	Gasket-Rocker Cover
			798	710234	Screw (Rocker Arm)	1023	715840	Cover-Rocker
						1026	711176	Rod-Push
						1029	715814	Arm-Rocker
						1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1052	711246	Sensor-Oil	1127	711320	Screw (Float Bowl)	1241	711084	Plate-Valve Spring
1053	710305	Module-Oil Gard				1319	794467	Label-Warning
1058	MS3824	Operator's Manual	1184	710068	Nut (Support Bracket)	1330	272147	Repair Manual
1095	715877	Gasket Set-Valve						
1119	710047	Screw (Alternator) Used on Type No(s). 0115.	1209	710234	Screw (Speed Control Panel)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
**6749-19** Assemblies include all parts shown in frames. **06/13/2007**