



Illustrated Parts List

Model Series

12S500

TYPE NUMBERS
0005 through 3856.



TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets Sets	8
Lubrication	2
Piston Group	2
Rewind Starter	7







PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

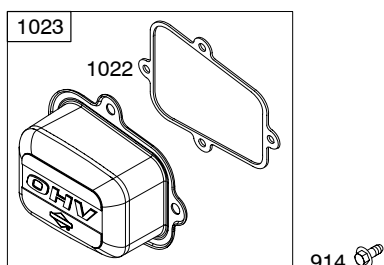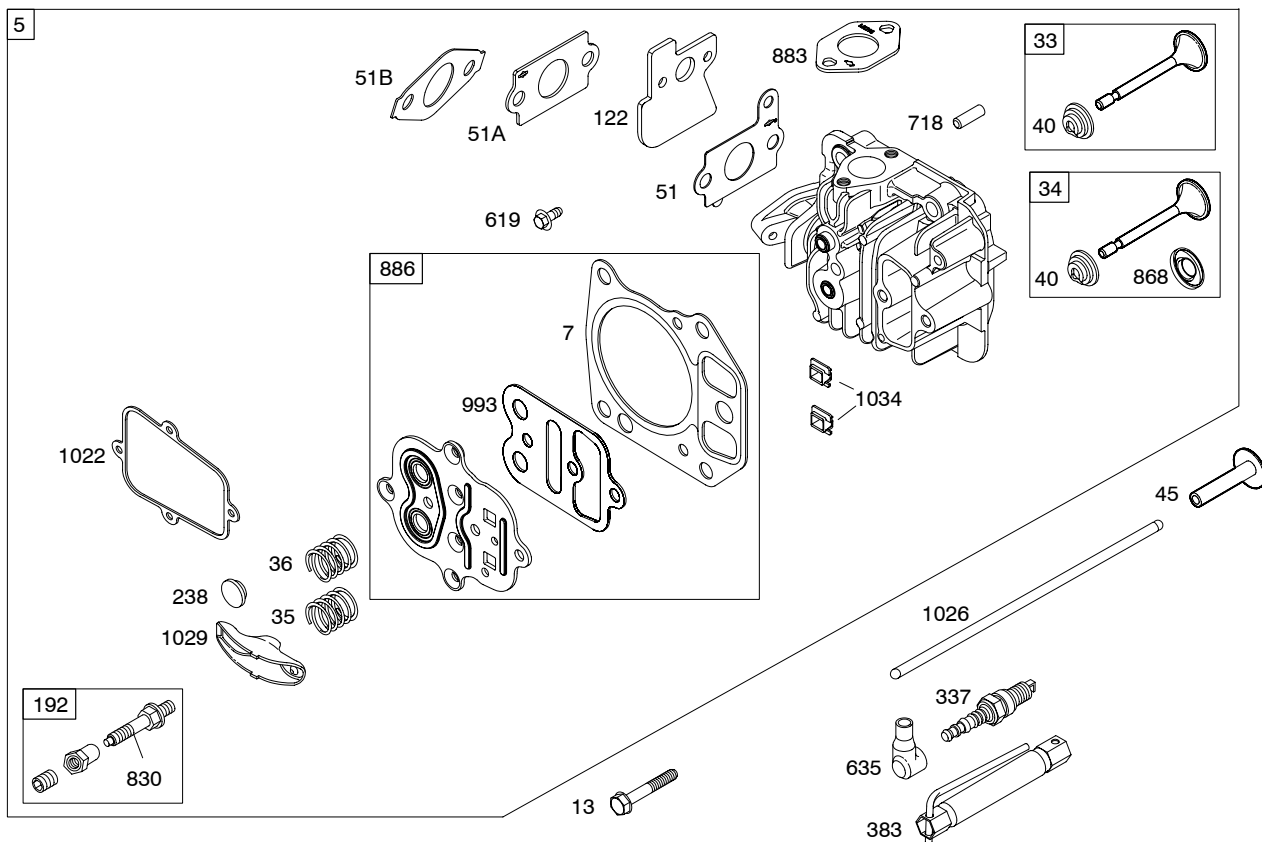










Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3775-3 Assemblies include all parts shown in frames. **09/26/2007**

12S500



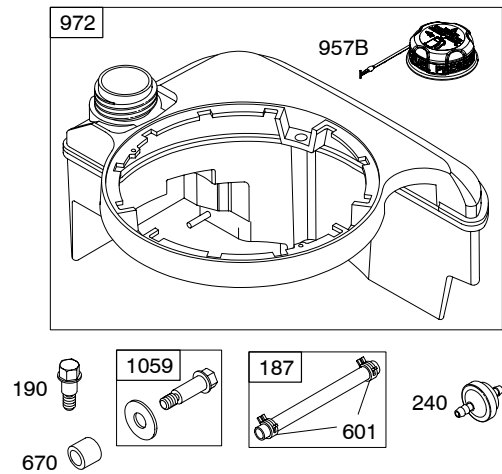
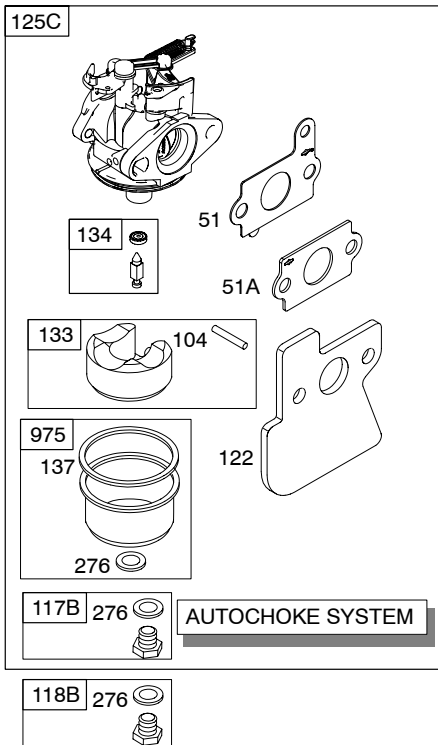
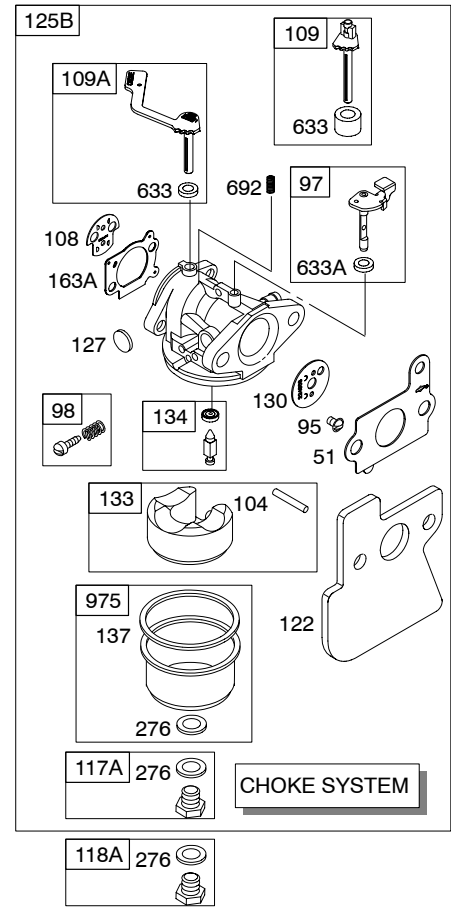
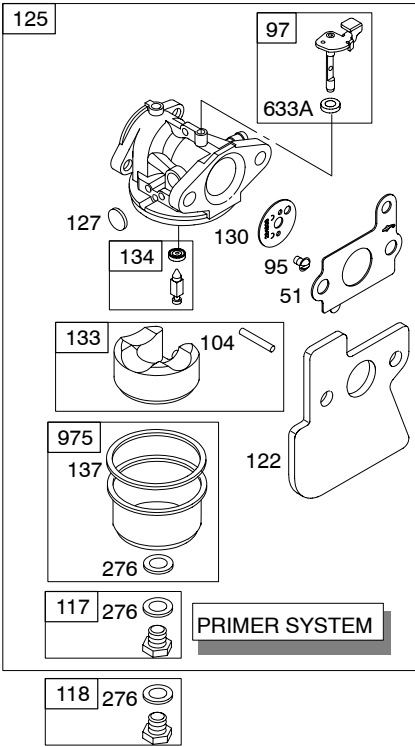


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3775-4 Assemblies include all parts shown in frames. 09/26/2007

 




12S500

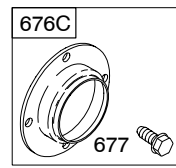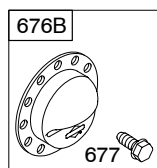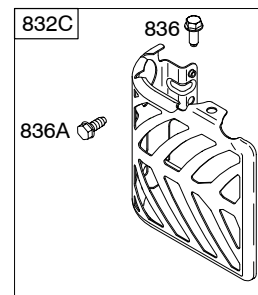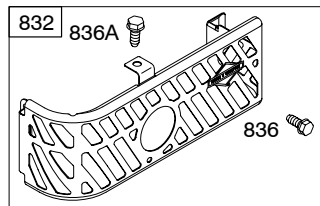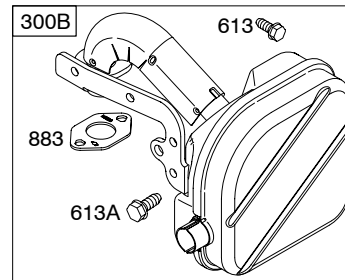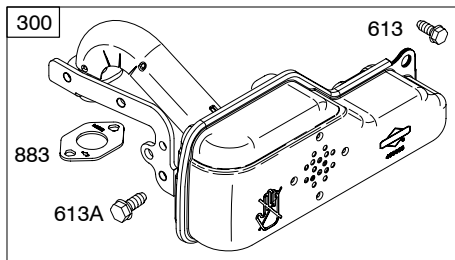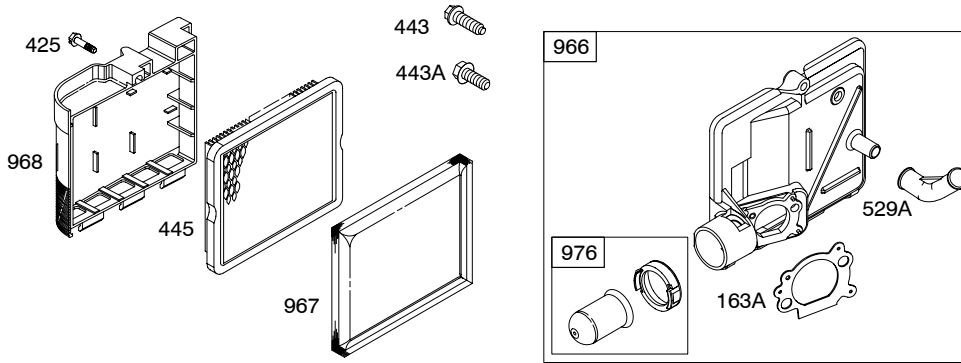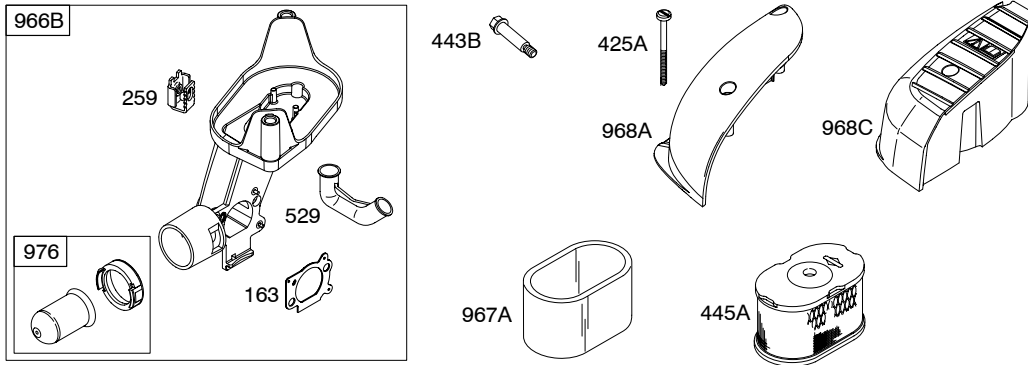





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3775-6 Assemblies include all parts shown in frames. 09/26/2007

 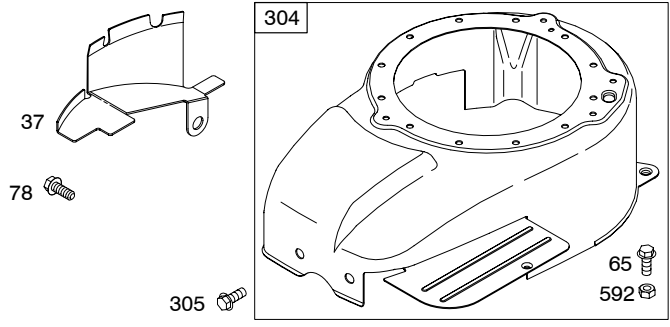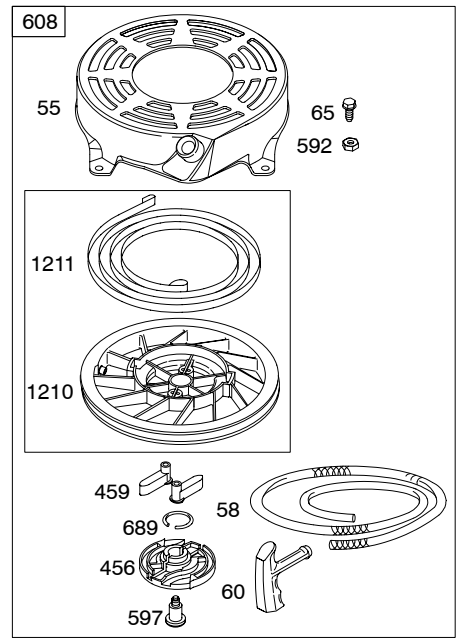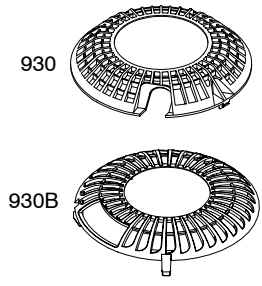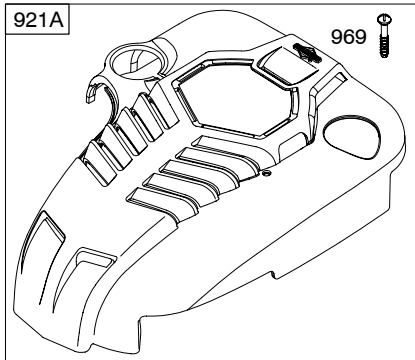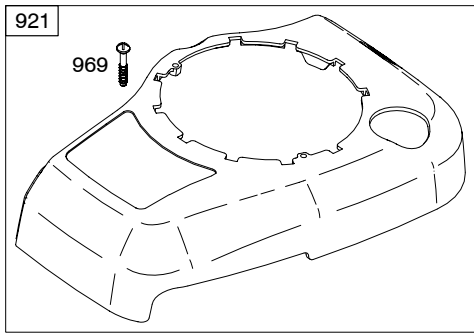

1036 EMISSIONS LABEL

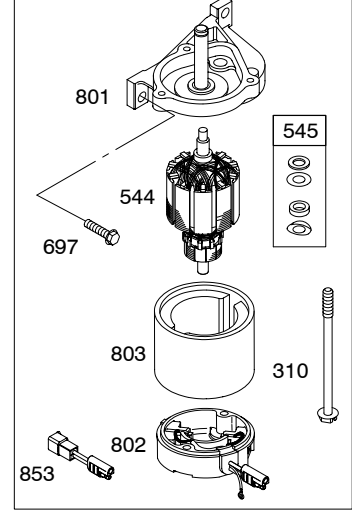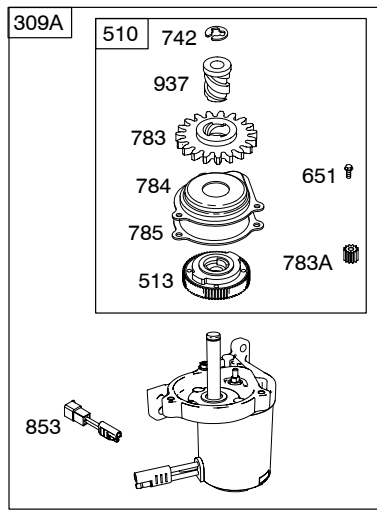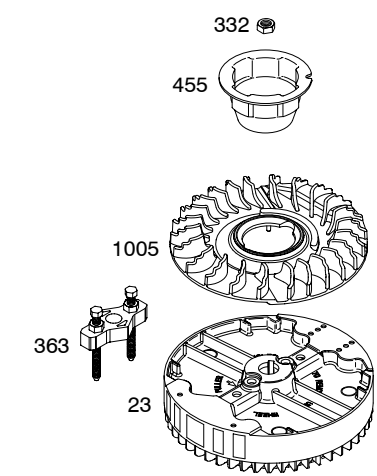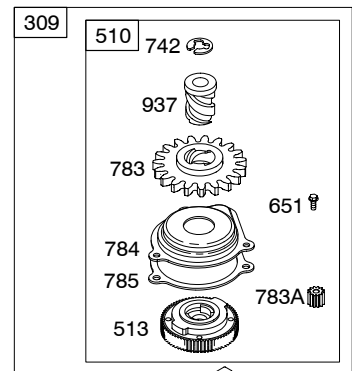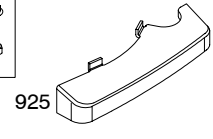

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3775-7 Assemblies include all parts shown in frames. 09/26/2007

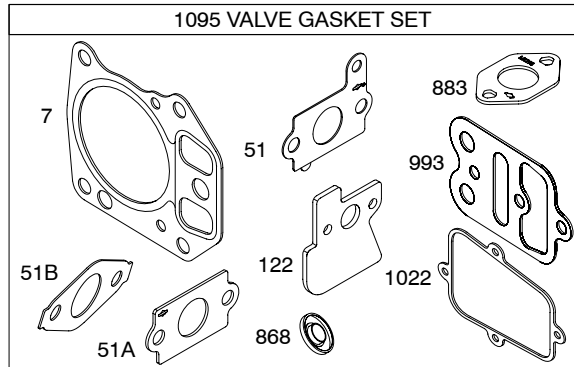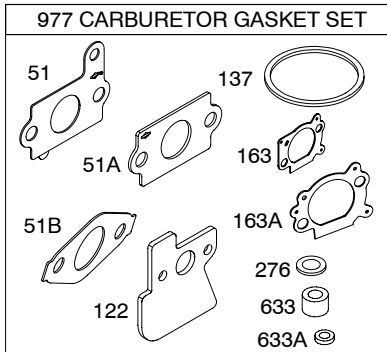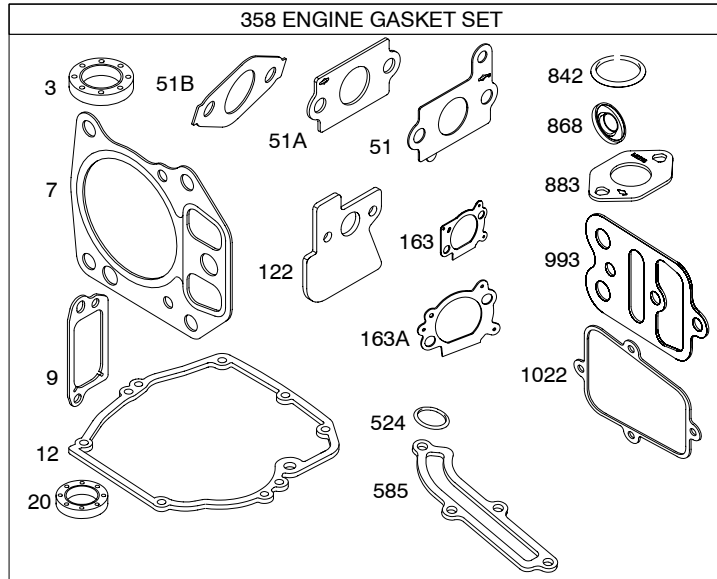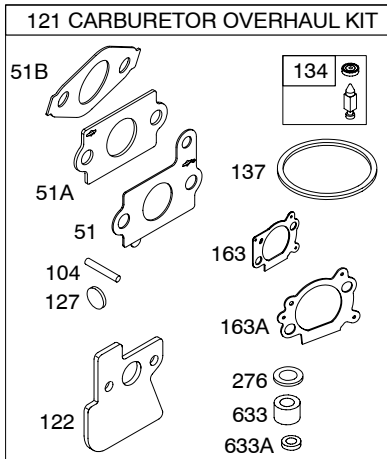

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692670	Cylinder Assembly ----- Note ----- 697893 Cylinder-Assembly Used on Type No(s). 0005, 0015, 0021, 0025, 0060, 0062, 0117, 0119, 0123, 0124.	20	*399781S	Seal-Oil (PTO Side)	55	691421	Housing-Rewind Starter
2	399269	Kit-Bushing/Seal (Magneto Side)	22	691092	Screw (Crankcase Cover/ Sump)	58	697316	Rope-Starter (Cut To Required Length) ----- Note ----- 791362 Rope-Starter Used on Type No(s). 0114, 0116, 0122.
3	*299819S	Seal-Oil (Magneto Side)	23	697610	Flywheel ----- Note ----- 790116 Flywheel Used on Type No(s). 0005, 0117, 0119, 0124.	60	281434S	Grip-Starter Rope
4	493279	Sump-Engine ----- Note ----- 498983 Sump-Engine Used on Type No(s). 0118, 0119.	24	222698S	Key-Flywheel	65	690837	Screw (Rewind Starter)
5	792381	Head-Cylinder	25	791968	Piston Assembly (Standard) ----- Note ----- 791326 Piston Assembly (.020" Oversize)	78	691108	Screw (Flywheel Guard)
7	*Δ697230	Gasket-Cylinder Head	26	791969	Ring Set (Standard) ----- Note ----- 791324 Ring Set (.020" Oversize)	95	691636	Screw (Throttle Valve)
8	495786	Breather Assembly				97	499682	Shaft-Throttle (Metal) ----- Note ----- 790121 Shaft-Throttle (Plastic)
9	*699833	Gasket-Breather				98	398185	Kit-Idle Speed
10	691125	Screw (Breather Assembly)				104	●691242	Pin-Float Hinge
11A	499675	Tube-Breather				108	691182	Valve-Choke
12	*692232	Gasket-Crankcase				109	499779	Shaft-Choke
13	691137	Screw (Cylinder Head)	27	691866	Lock-Piston Pin	109A	499681	Shaft-Choke
15	691680	Plug-Oil Drain (Square Socket)	28	499423	Pin-Piston	117	498981	Jet-Main (Standard)
16	691457	Crankshaft Used on Type No(s). 0005, 0015, 0060, 0118, 0119. ----- Note ----- 691456 Crankshaft Used on Type No(s). 0025, 0062, 0111, 0112, 0114, 0115, 0116, 0122, 0125, 0810, 0856, 0948, 0986, 0990, 0993, 3810, 3856. 693291 Crankshaft Used on Type No(s). 0021. 692823 Crankshaft Used on Type No(s). 0117, 0124. 692716 Crankshaft Used on Type No(s). 0123.	29	499424	Rod-Connecting	117A	694250	Jet-Main (Standard)
			32	691664	Screw (Connecting Rod)	117B	697355	Jet-Main (Standard)
			32A	695759	Screw (Connecting Rod)	118	497466	Jet-Main (High Altitude)
			33	499642	Valve-Exhaust	118A	497466	Jet-Main (High Altitude)
			34	499641	Valve-Intake	118B	494870	Jet-Main (High Altitude)
			35	691304	Spring-Valve (Intake)	121	792383	Kit-Carburetor Overhaul
			36	691304	Spring-Valve (Exhaust)	122*♦♦Δ692799		Spacer-Carburetor
			37	694086	Guard-Flywheel	122A	792382	Spacer-Carburetor
			40	692194	Retainer-Valve			
			43	691997	Slinger-Governor/Oil			
			45	690977	Tappet-Valve			
			46	694039	Camshaft			
			51*♦♦Δ692668		Gasket-Intake			
			51A*♦♦Δ697735		Gasket-Intake			
			51B*♦♦Δ692555		Gasket-Intake			

* Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

12S500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
125	790120	Carburetor (Primer System)	209	691851	Spring-Governor Used on Type No(s). 0005, 0015, 0021, 0025, 0060, 0062, 0810, 0856, 3810, 3856.	222A	792402	Bracket-Control Used on Type No(s). 0118.
125B	698055	Carburetor (Choke System) ----- Note ----- 698056 Carburetor (Choke System) Used on Type No(s). 0123.			----- Note ----- 691291 Spring-Governor Used on Type No(s). 0111, 0112, 0114, 0115, 0116, 0117, 0122.	222F	792398	Bracket-Control Used on Type No(s). 0111, 0112, 0115, 0125.
125C	793874	Carburetor (Autochoke System)			691290 Spring-Governor Used on Type No(s). 0118, 0119, 0124.	222G	792400	Bracket-Control Used on Type No(s). 0123.
127	694468	Plug-Welch			691292 Spring-Governor Used on Type No(s). 0125.	222H	792397	Bracket-Control Used on Type No(s). 0005, 0015, 0021, 0025, 0060, 0062, 0117, 0119, 0124.
130	691203	Valve-Throttle ----- Note ----- 696564 Valve-Throttle (Used With Plastic Throttle Shaft) 691181 Valve-Throttle Used on Type No(s). 0123.			690319 Spring-Governor Used on Type No(s). 0986.	222J	792404	Bracket-Control Used on Type No(s). 0114, 0116, 0122, 0810, 0856, 0948, 0986, 0990, 0993, 3810, 3856.
133	398187	Float-Carburetor			791156 Spring-Governor Used on Type No(s). 0948, 0990, 0993.	227	691467	Lever-Governor Control
134	398188	Kit-Needle/Seat			692906 Spring-Governor Used on Type No(s). 0123.	236	691826	Link-Lockout
137	693981	Gasket-Float Bowl	211	692434	Spring-Governed Idle	238	691300	Cap-Valve
146	690979	Key-Timing	216	793655	Link-Choke	240	298090S	Filter-Fuel
163	691894	Gasket-Air Cleaner	217	690354	Spring-Choke Return	259	691189	Bracket-Casing Clamp
163A	692667	Gasket-Air Cleaner				265	690798	Clamp-Casing
187	791766	Line-Fuel (Cut to Required Length)				267	691044	Screw (Casing Clamp)
188	691147	Screw (Control Bracket)				268	691025	Casing-Control Wire (Cut To Required Length)
190	690940	Screw (Fuel Tank)				269	691026	Wire-Control (Cut To Required Length)
192	694543	Adjuster-Rocker Arm				270	691027	Nut (Control Wire Casing)
202	691303	Link-Mechanical Governor ----- Note ----- 793661 Link-Mechanical Governor Used on Type No(s). 0116.				271	691028	Lever-Control
						276	271716	Washer-Sealing
						287	690940	Screw (Dipstick Tube)
						291	793652	Thermostat

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	694248	Muffler-Exhaust ----- Note ----- 697590 Muffler Used on Type No(s). 0118, 0119, 0124, 0810, 0856, 0948, 0986, 0990, 0993, 3810, 3856.	310	692327	Bolt (Starter Motor)	459	281505S	Ratchet-Pawl
300B	699769	Muffler-Exhaust ----- Note ----- 793653 Muffler Used on Type No(s). 0116.	332	690662	Nut (Flywheel)	474	691991	Alternator
304	695976	Housing-Blower Used on Type No(s). 0111, 0112, 0114, 0122, 0125, 0810, 0986, 0990, 0993, 3810. ----- Note ----- 499677 Housing- Blower Used on Type No(s). 0015, 0021, 0025, 0060, 0062, 0115, 0856, 0948, 3856. 499676 Housing- Blower Used on Type No(s). 0005, 0117, 0118, 0119, 0123, 0124. 793873 Housing- Blower Used on Type No(s). 0116.	333	802574	Armature-Magneto ----- Note ----- 793662 Armature- Magneto Used on Type No(s). 0116.	505	691251	Nut (Governor Control Lever)
305	691108	Screw (Blower Housing)	334	691061	Screw (Magneto Armature)	510	795093	Drive-Starter
306	691232	Shield-Cylinder	337	692051	Plug-Spark (Resistor) ----- Note ----- 692720 Plug-Spark (EMS)	513	692358	Clutch-Drive
307	690345	Screw (Cylinder Shield)	356	692390	Wire-Stop	523	499621	Dipstick
309	695550	Motor-Starter (Used Before Code Date 07052900).	356B	692151	Wire-Stop	524	★692296	Seal-Dipstick Tube
309A	795092	Motor-Starter (Used After Code Date 07052800).	358	792384	Gasket Set-Engine	525	495265	Tube-Dipstick
			363	19069	Puller-Flywheel	529	692937	Grommet
			365	691129	Screw (Carburetor)	529A	691923	Grommet
			383	19374S	Wrench-Spark Plug	544	690786	Armature-Starter
			404	690272	Washer (Governor Crank)	545	492919	Washer Set (Starter Motor)
			425	690670	Screw (Air Cleaner Cover)	562	691119	Bolt (Governor-Control Lever)
			425A	690244	Screw (Air Cleaner Cover)	578	398153	Wire Assembly
			443	692523	Screw (Air Cleaner Primer Base)	584	697734	Cover-Breather Passage
			443A	691637	Screw (Air Cleaner Primer Base)	585	★691879	Gasket-Breather Passage
			443B	690255	Screw (Air Cleaner Primer Base)	592	690800	Nut (Rewind Starter)
			445	491588S	Filter-Air Cleaner Cartridge	597	691696	Screw (Pawl Friction Plate)
			445A	697029	Filter-Air Cleaner Cartridge	601	791850	Clamp-Hose
			455	791960	Cup-Flywheel	608	497680	Starter-Rewind ----- Note ----- 791363 Starter- Rewind Used on Type No(s). 0114, 0116, 0122.
			456	692299	Plate-Pawl Friction	613	691108	Screw (Muffler) ----- Note ----- 793651 Screw (Muffler) Used on Type No(s). 0116.
						613A	691140	Screw (Muffler)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

12S500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
615	690340	Retainer-Governor Shaft	802	695267	Cap-End	967	493537S	Filter-Pre Cleaner
616	698801	Crank-Governor	803	695266	Housing-Starter	967A	273356S	Filter-Pre Cleaner
619	691108	Screw (Cylinder Head Plate)	830	694544	Stud-Rocker Arm	968	692298	Cover-Air Cleaner
621	692310	Switch-Stop	832	691466	Guard-Muffler	968A	691342	Cover-Air Cleaner
633	◆◆691321	Seal-Choke/Throttle Shaft	832C	695593	Guard-Muffler	968C	692692	Cover-Air Cleaner
633A	◆◆691321	Seal-Choke/Throttle Shaft	836	691147	Screw (Muffler Guard)	969	691138	Screw (Blower Housing Cover)
635	66538S	Boot-Spark Plug	836A	697551	Screw (Muffler Guard)	972	699374	Tank-Fuel (Plastic)
651	691660	Screw (Starter Gear Cover)	842	★691031	Seal-O Ring (Dipstick Tube)	975	493640	Bowl-Float
670	692294	Spacer-Fuel Tank	843	691884	Sleeve-Lever	976	694395	Primer-Carburetor
676B	396548	Deflector-Muffler	847	692047	Dipstick/Tube Assembly	977	792385	Gasket Set-Carburetor
676C	497682	Deflector-Muffler	851	493880S	Terminal-Spark Plug	993	★△694088	Gasket-Cylinder Head Plate
677	690661	Screw (Muffler Deflector)	853	696842	Adaptor-Wire	1005	691346	Fan-Flywheel
684	690345	Screw (Breather Passage Cover)	868	★△692044	Seal-Valve	1019	697624	Kit-Label
689	691855	Spring-Friction	883	★△691893	Gasket-Exhaust	1022	★△691890	Gasket-Rocker Cover
692	690572	Spring-Detent	886	696268	Gasket Set-Cylinder Head/Plate	1023	499624	Cover-Rocker Arm
697	691127	Screw (Drive Cap)	910	691094	Stud (Alternator)	1026	692045	Rod-Push
718	690959	Pin-Locating	914	691108	Screw (Rocker Cover)	1029	691230	Arm-Rocker
741	790345	Gear-Timing (Use Without Woodruff Key)	921	692699	Cover-Blower Housing	1034	691343	Guide-Push Rod
		----- Note -----	921A	699633	Cover-Blower Housing	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)
		691830 Gear-Timing (Uses Woodruff Key)	922	691831	Spring-Brake	1058	277102	Operator's Manual
742	93941	Retainer-E-Ring	922A	692135	Spring-Brake	1059	692311	Kit-Screw/Washer
745	691648	Screw (Brake)	923	691994	Brake	1095	792386	Gasket Set-Valve
783	691918	Gear-Pinion	923A	695891	Brake	1102	691255	Pilot-Guide
783A	691269	Gear-Pinion	925	690595	Cover-Linkage	1119	692979	Screw (Alternator)
784	795095	Cover-Starter Gear	930	691919	Guard-Rewind	1160	690345	Screw (Interlock Switch)
785	692352	Gasket-Starter Cover	930B	692691	Guard-Rewind	1210	498144	Pulley/Spring Assembly (Pulley)
789	696547	Harness-Wiring	935	499421	Switch-Interlock	1211	498144	Pulley/Spring Assembly (Spring)
789A	696546	Harness-Wiring	937	691325	Spline-Starter	1319	794467	Label-Warning
801	690782	Cap-Drive	946	396526	Guide-Rope	1330	272147	Manual-Repair
			957B	699985	Cap-Fuel Tank (Plastic)			
			966	692673	Base-Air Cleaner Primer			
			966B	690243	Base-Air Cleaner Primer			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No.1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.